

DIGITAL BATTERY TESTER USER MANUAL

ACCURATELY TEST:

C, AA, AAA, D, N, 9V 6F22 batteries and 1.55V button cell. Built of durable plastic and stainless steel and powered by a single 1.55V battery (included).

USAGE:

Fix a battery in the appropriate position and the tester will begin. The two measuring points of 9V battery are on the bottom of the unit. The battery's reading value will be shown on the LCD display in the three areas: red zone-poor, yellow zone-weak and blue zone-good.

IMPORTANT:

Remove battery when not using for long periods. Dispose of battery in accordance with local ordinances for disposal of hazardous materials.