


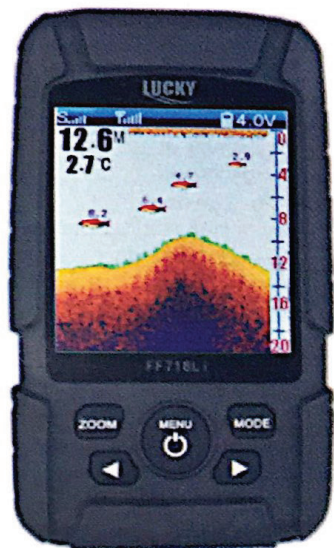

FF718Li-CW FISH FINDER WIRELESS MODE OPERATIONS MANUAL






www.goodluckycn.com


FF718Li-CW FISH FINDER WIRELESS MODE OPERATIONS MANUAL

1. Thank you for choosing **LUCKY** FF718Li-CW fish finder.

The FF718Li-CW is a combo unit that allows you to choose either Cable transducer user mode or Wireless user mode. This manual for WIRELESS user mode only. The FF718Li-CW has two different user modes: WIRELESS/TRANSDUCER Use the User Mode menu choice to change between these two user modes.



WIRELESS: This user mode allows you to operate the FF718Li-CW with the wireless sonar sensor. When signal indicator () is displayed on the screen, the unit is in Wireless mode.

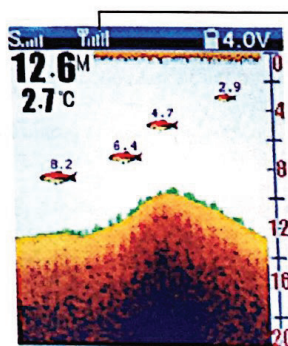

wireless sonar sensor signal connect indicator

2. Using the Wireless sonar sensor

The Wireless user mode allows you to use the Wireless Sonar Sensor. Simply attach the wireless sensor to the end of your fishing line and cast it into the water as you would a normal float or lure, then power on the FF718Li-CW and you are ready to fish. In Wireless mode, your FF718Li-CW uses sonar technology to send sound waves from the wireless sonar sensor, the returned "echoes" are transmitted with wireless technology to the display unit and displayed on the LCD. New information

appears on the right . As this information moves to the left a very accurate picture of the underwater world is displayed, including the depth of underwater objects such as the bottom, fish, and structures.




fig-1

3.Using the Wireless sonar sensor

The Wireless user mode allows you to use the Wireless Sonar Sensor. Simply attach the wireless sensor to the end of your fishing line and cast it into the water as you would a normal float or lure, then power on the FF718Li-W and you are ready to fish. In Wireless mode, your FF718Li-W uses sonar technology to send sound waves from the wireless sonar sensor, the returned "echoes" are transmitted with wireless technology to the display unit and displayed on the LCD.

New information appears on the right .

As this information moves to the left a very accurate picture of the underwater world is displayed, including the depth of underwater objects such as the bottom, fish, and structures.

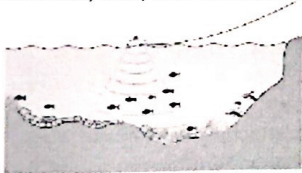


NOTE: When casting the Wireless Sonar Sensor into water, shock from abrupt contact with rocks will damage your Wireless sonar sensor, we recommend using your wireless sensor in water deeper than 1 foot only.

4.Attaching the Wireless sonar sensor

The line coming from your reel can be tied off to the front hole in the Wireless Sonar Sensor. If you wish to use the Wireless Sonar

Sensor as a conventional float, use the second hole to attach your hook using a lighter weight line.

A snag will break the lighter line if you have to break free. Slip line techniques are not recommended because of the higher risk of losing the Wireless Sonar Sensor. If you do use the slip line method, use a lighter weight line after the lower stop, enabling retrieval of the Wireless Sonar Sensor if the lower line with hook breaks away.



Handle the Wireless Sonar Sensor by the antenna tower when it has been in water. Use a heavy test line, standard knots, and tackle such as a swivel.

The second leader hole is for using the Wireless Sonar Sensor as a float. Connect a lighter weight hook line as this will submerge the Wireless Sonar Sensor, causing signal loss.

NOTE : You will increase the possibility of breaking your line if you use light test pound line on your reel. The Wireless Sonar Sensor is positively buoyant . The maximum amount of weight for any attachment to the Wireless Sonar Sensor is approximately 5.67 grams, and includes the combined weight of any hook, line, weight, swivel/snap swivel and bait that is attached to the Wireless Sonar Sensor.


NOTE : Store the Wireless Sonar Sensor in a dry, non-metallic container, such as a tackle box, in a separate compartment, and isolated from any metallic devices.

NOTE : The bottom of the Wireless Sonar Sensor should not be handled during sonar operation, as this may cause physical discomfort and may result in personal injury in the form of tissue damage. Handle the Wireless Sonar Sensor only by the antenna tower when it has been in the water.

NOTE : The Wireless Sonar Sensor is not intended for use by children younger than 6 years old without adult supervision as the Wireless Sonar Sensor may represent a choking hazard to small children.

5.Wireless Sonar Sensor Power

The Wireless Sonar Sensor has a CR-2032 Lithium battery .It is can be replaced.Pls check the attach pictures to change the battery. Remove the battery door of the Wireless Sonar Sensor and press the lock-block of the battery holder, the battery will flip automatically.

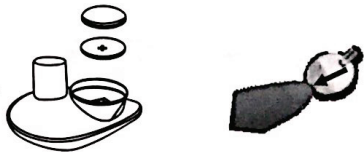

NOTE: Make sure that the O-ring in the battery compartment is present, positioned correctly in the grooves, and free of debris before reinstalling the battery door. The Wireless Sonar Sensor has contacts that perceive when the device is immersed in the water. These contacts turn on the Sonar Sensor/Receiver and begin transmitting the sonar information via RF to the display. The Wireless Sonar Sensor automatically stops using power a few seconds after being pulled out of the water.


NOTE: Do not place the Wireless Sonar Sensor in a wet area when not in use as this will turn on the Wireless Sonar Sensor and shorten its usable life. Store the Wireless Sonar Sensor in a dry area when not in use to conserve power. Never place the Wireless Sonar Sensor in a wet area of a boat or on a metal surface that could accidentally power it on.

NOTE: If the Wireless Sonar Sensor was used in salt water, rinse it with fresh water before storing it. Display View A simple menu system allows you to access your FF718Li-W adjustable settings. To activate the menu system, press the POWER-MENU key. Press the POWER-MENU key repeatedly to display the FF718Li-W menu settings, one at a time. When a menu settings is on the display, use the UP and DOWN Arrow keys to adjust the menu setting. Menu settings are removed from the screen automatically after several seconds. In Normal operating mode, most menu settings saved to memory.

6. Display View

The FF718Li-CW displays underwater information in an easy-to-understand format. The top of the display corresponds to the water surface at the transducer, and the bottom of the display corresponds to the Depth Range automatically selected for the current water depth. The Bottom Contour varies as the depth under the boat changes. Digital readouts provide precise information for depth, fish and water temperature.

As the boat moves, terrain and bottom composition variations are displayed. Fish, baitfish and the rmoclines (underwater temperature changes) are displayed when detected. Underwater conditions vary greatly, so some experience and interpretation is needed to realize all the benefits of the FF718Li-CW use the picture as a guide to the most common conditions and practice using the FF718Li-CW over known bottom types.

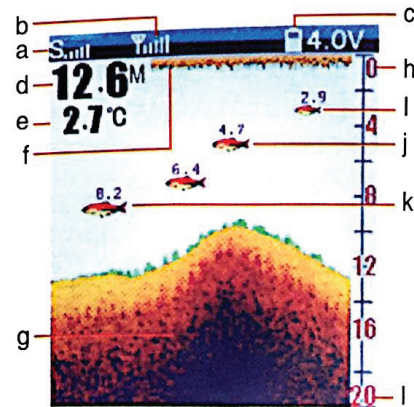



- a、 Sensitivity
- b、 Sensor connect indicator
- c、 Fish finder battery strength
- d、 Water depth
- e、 Water temperature
- f、 Water surface
- g、 Bottom contour
- h、 upper zoom range
- i、 Small fish icon with depth
- j、 Middle fish icon with depth
- k、 Large fish icon with depth
- l、 Lower zoom range


7. Powering ON and OFF

Press and release the POWER-MENU key to power the FF718Li-CW on. Press and hold the POWER-MENU key until the unit shuts down to power off.




When the FF718Li-CW powers on, the  will temporarily display on screen last for 5seconds. Then will show . From this menu, use the arrow keys to select either Start-Up, Simulation. If you do nothing, the unit will default to normal on the water use.

- Use Start-Up for on the water use.



- Use Simulation for learning how to use the system with simulated sonar data; access Simulation by pressing the right Arrow Key once



8. The Menu System

A simple menu system allows you to access your FF718Li-CW adjustable settings. To activate the menu system, press the POWER-MENU key. Press the POWER-MENU key repeatedly to display the FF718Li-CW menu settings, one at a time. When a menu settings is on the display, use the UP and DOWN Arrow keys to adjust the menu setting. Menu settings are removed from the screen automatically after several seconds. In normal operating mode, most menu settings saved to memory will not return to their default values when the unit is turned off. See individual menu choices for more information.

NOTE: Each time the POWER-MENU key is pressed, the backlight momentarily illuminates for easy viewing at night. Adjust the LIGHT menu setting to keep the backlight on.


8.1 User mode-----



Press the POWER-MENU key until USER MODE menu appears. Select a setting from



8.2 Sensitivity—



Press the POWER-MENU key until SENSITIVITY appears. Sensitivity controls how much detail is shown on the display. Increasing the sensitivity shows more sonar returns from small baitfish and suspended debris in the water; however, the display may become too cluttered. When operating in very clear water or greater depths, increased sensitivity shows weaker returns that may be of interest. Decreasing the sensitivity eliminates the clutter from the display that is sometimes present in murky or muddy water. If Sensitivity is adjusted too low, the display may not show many sonar returns that could be fish. (1 –9).


8.3 Depth Range---




Press the POWER-MENU key until DEPTH RANGE appears. Automatic is the default setting. When in automatic, the lower range will be adjusted by the unit to follow the bottom. (Auto, 1 to 45 Meet)

NOTE: In manual operation, if the current depth is greater than the depth range settings, the bottom will not be visible on the display. Select AUTO to return to automatic operation.

8.4 ZOOM—




Press the POWER-MENU key until ZOOM appears. Select Auto to magnify the area around the bottom in order to reveal fish and structure close to the bottom that may not be visible during normal operation. When ZOOM is set to Auto, the upper and lower Depth Ranges are automatically adjusted to keep the area above and below the bottom on the display. Select Off to return to normal operation. (Off, 1 to 45 Meet)

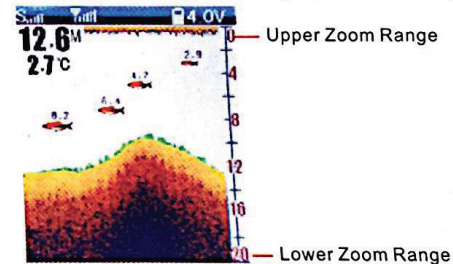


There is also a series of manual ranges which can be selected. The manual depth ranges are determined by the present depth conditions.

8.5 Depth Alarm –




Press the POWER-MENU key until DEPTH ALARM appears. Select OFF for no Depth Alarm, or select 1 to 45 Meet to set the alarm depth. An audible alarm sounds when the depth is equal to or less than the setting (Off, Off, 1 to 45 Meet)

8.6 Fish Icon



Make sure press the POWER-MENU key until FISH ICON appears. Select either Off to view "raw" sonar returns, or On to view Fish symbols. Fish ICON uses advanced signal processing to interpret sonar returns, and will display a Fish Symbol when very selective requirements are met. A select number of possible fish returns will be displayed with their associated depth. (On, Off)




8.7 Fish Alarm—



Press the POWER-MENU key until FISH ALARM appears. Select Off for no fish alarm, or one of the following symbols to set the alarm. An alarm will sound when the FF718Li detects fish that correspond to the alarm setting. Fish Alarm will only sound if Fish ID+ is also set to On. (Off, Large fish, Large fish/Small fish).

- Large fish only 
- Large fish/Middle fish 
- Large fish/Middle/Small fish 

8.8 Units



Make sure press the POWER-MENU key until UNITS appears. UNITS selects the Depth units of Feet or Meter and TEMPE units selects the °C or °F.

8.9 Color tone



Press the POWER-MENU key until Color tone menu appears. Select a setting from BLUE, ORANGE or GREY.

8.10 Battery alarm



Press the POWER-MENU key until Battery alarm menu appears. Select a setting from OFF or from 3.6V-4.2V, Battery alarm sounds when the input battery voltage is equal to or less than the menu setting.

8.11 Language—




Press the POWER-MENU key until LANGUAGE appears. The FF718Li-CW fish finder has two language choice (English, Russian)

8.12 Brightness



Press the POWER-MENU key until Brightness appears. Use the backlight for night fishing. Select 1-9 to activate the backlight at the desired level.

8.13 Chart Speed



Press the POWER-MENU key until CHART SPEED menu appears. Select a setting from 1-9 to increase or decrease the chart speed, where 1 is the slowest and 9 is the fastest chart speed. (1 to 9)

9. Maintenance

Follow these simple procedures to ensure your FF718Li-CW continues to deliver top performance.

If the unit comes into contact with salt spray, wipe the affected surfaces with a cloth dampened in fresh water.

Do not use a chemical glass cleaner on the lens - this may cause cracking in the lens.

When cleaning the LCD protective lens, use a chamois and non-abrasive mild cleaner. Do not wipe while dirt or grease is on the lens. Be careful to avoid scratching the lens.

Never leave the unit in a closed car or trunk - the extremely high temperatures generated in hot weather can damage the electronics.

10. Wireless sonar sensor Maintenance

After using the Wireless sonar sensor in salt water, wipe the affected surfaces with a cloth dampened with fresh water. The Wireless sonar sensor Cuprum-switch must be rinsed with fresh water after exposure to salt water prevent corrosion.

If your Wireless sonar sensor remains out of the water for a long period of time, it may take some time to wet it when returned to the water. Small air bubbles can cling to the surface of the Wireless sonar sensor and interfere with proper operation. Wipe the face of the Wireless sonar sensor with a wet cloth to remove them.

Never leave the Wireless sonar sensor in a closed car or trunk-the extremely high temperatures generated in hot weather can damage the electronics.

11. Trouble

1. The FF718Li-CW loses signal in wireless User Mode.
If the FF718Li-CW, while in Wireless user mode, is not able to get an RF signal from the Wireless sonar sensor, the display will stop updating and the NO SINGAL will be displayed after several seconds. Whenever reception is lost or the Wireless sonar sensor pulled out from the water for more than a few seconds, the



will be displayed until the Wireless sonar sensor is placed back in the water and reception is regained.

- 1) The Wireless sonar sensor uses line -of-sight wireless technology. If objects are placed between the FF718Li-CW and the Wireless sonar sensor, reception may be lost.
 - 2) The Wireless sonar sensor depth range is 2 to 130 feet (0.6 to 40 meters). Erratic readings may occur in water that is shallower than 2 feet. In addition, because of the nature of sonar, this product is not intended for use in swimming pools or small enclosed bodies of water.
 - 3) Reeling the Wireless sonar sensor too fast can cause loss of signal and the screen will freeze.
 - 4) Check the buoyant balance between the Wireless sonar sensor and your tackle; over 0.2 ounce will submerge the Wireless sonar sensor, causing signal loss.
 - 5) The Wireless sonar sensor may not obtain its maximum RF distance of 200 feet unless the water is smooth. Waves or chop may reduce the RF range significantly.
2. When in very shallow water, I get gaps in the bottom reading and inconsistent digital depth indication.
The Wireless sonar sensor will work reliably in water 2 feet (0.8 meters) or deeper. The depth is measured from the Wireless sonar sensor.

A Wireless sonar sensor to FF718Li-CW distance of greater than 300ft may cause intermittent screen display. Excessively rough water may cause the Wireless sonar sensor to submerge, again losing contact.

- 3. The display shows fluctuating depth readings and excessive clutter, including vertical bars that may be drawn on top of fish icons.
- 4. The screen jumps and the bottom has an abrupt change; sometimes a vertical line is missing or a black line from top to bottom is displayed. This screen image jump is due to an automatic change in depth. New returns graphed at a different scale will not match up with the historic data already graphed at a higher or lower scale. Vertical lines can also occur as the radio signal from the Wireless sonar sensor is lost and then regained in rough water conditions.

SPECIFICATIONS

Fish finder:

- 1. Input power: -----3.7 Volt rechargeable lithium battery
- 2. Display Type-----2. 8 inch color TFT LCD dispalry,240*(RGB)*320
- 3. Charger Voltage-----AC 5V,1A
- 4. Running time-----20 hours (depend on actual using and working status)

Wireless sonar sensor:

- 1. Input power-----CR-2032 Lithium battery
- 2. Sonar operation Frequency-----125 KHz
- 3. Sonar coverage-----90 degrees
- 4. Depth capability -----45 meters (145 feet)/0.7 meters (2 feet)
- 5. Surface water temperature-----built in transducer
- 6. Wireless operational frequency-----433.92 MHz
- 7. Wireless operational range----- 180 meters (590 feet)
- 8. Charger Voltage-----AC 5V,1A

LUCKY MANUFACTURER CO.,LTD

JINDONG INDUSTRIAL ZONE, JINHUA CITY, ZHEJIANG PROVINCE, CHINA
Mail: sales@goodluckycn.com
Tel: 0086-579-8208-1596
Fax: 0086-579-8208-1586
Http://www.goodluckycn.com
Http://www.luckycn.en.alibaba.com
Http://www.made-in-china.com/showroom/luckyproducts